

**3M** Science.  
Applied to Life.™



**Safety backed  
by science.**


**3M™ SecureFit™  
Protective Eyewear**

## Performance. Style. Comfort.

### 3M™ SecureFit™ Protective Eyewear

Protecting your vision on the job is important. But it doesn't have to mean sacrificing style or comfort. Get eyewear that performs — and looks good doing it. Featuring a comfortable fit and a sleek profile designed to work with other personal protective equipment, 3M™ SecureFit™ Protective Eyewear helps keep you safe and comfortable on the job.



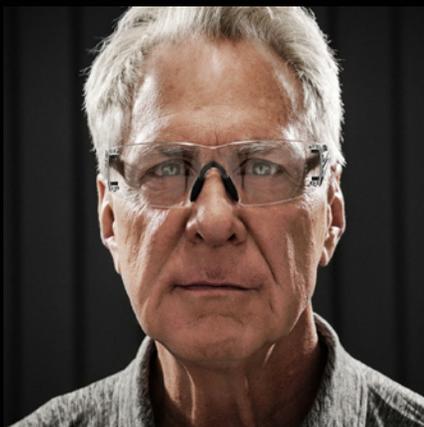


## The science of comfort.

We collected data on head and face shapes around the world to develop a patented design that self-adjusts to individual head sizes and shapes. This design provides the same level of comfort to individuals across a diverse workforce.

Regardless of head size, from small heads to large heads, our 3M™ SecureFit™ Pressure Diffusion Temple Technology is designed to provide a secure and comfortable fit for an extended period of wear time.




## Designed to perform.

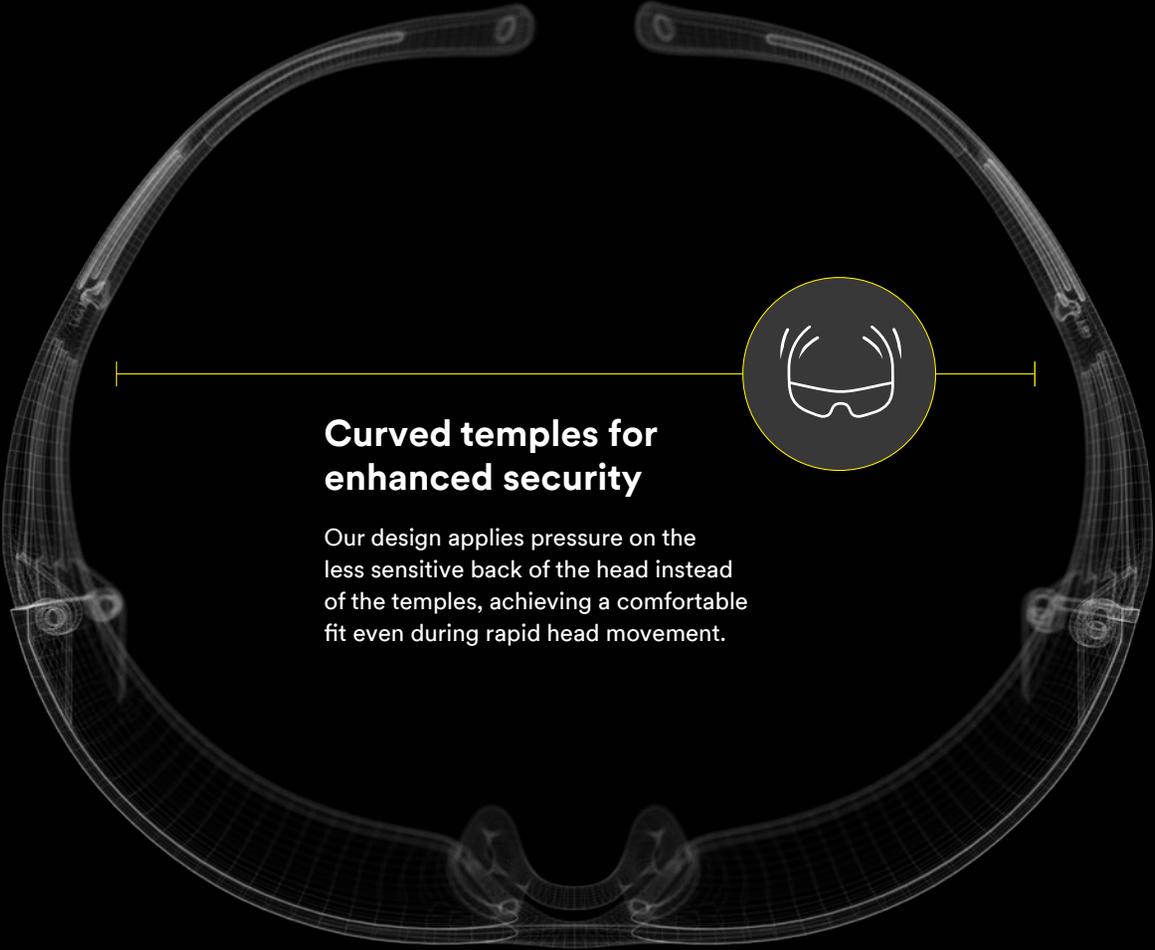

### Curved temples for enhanced security

Our design applies pressure on the less sensitive back of the head instead of the temples, achieving a comfortable fit even during rapid head movement.

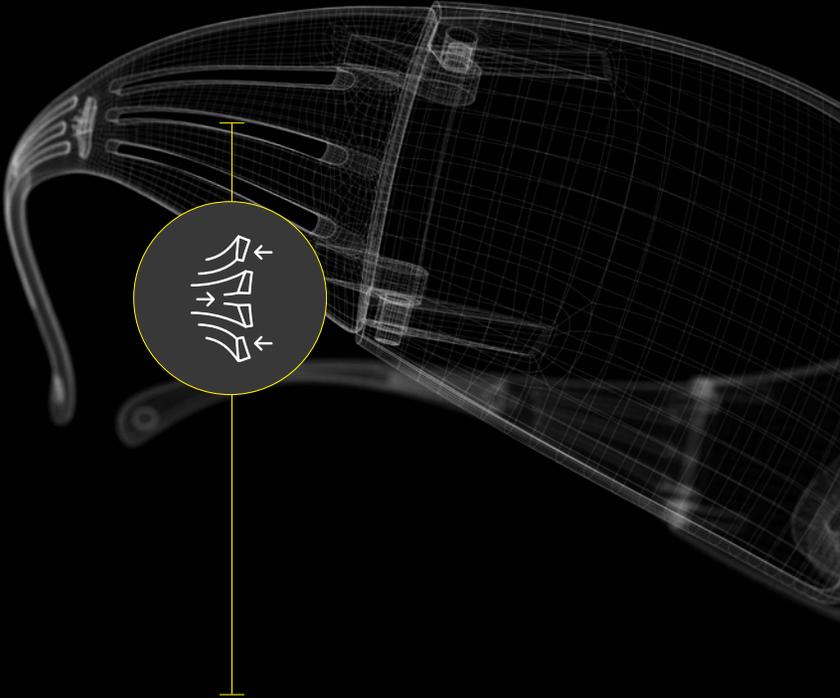

### 3M™ Pressure Diffusion Temple Technology

3M's innovative temple design features slotted ribs that provide comfortable pressure equalization, allowing the temples to flex and self-adjust to the size and shape of the wearer's head.

## The benefits are clear.

Fogged lenses can be frustrating and dangerous. But 3M™ SecureFit™ Protective Eyewear models featuring 3M™ Scotchgard™ Protector Anti-Fog Coating can help workers see clearly for longer, thanks to an active ingredient that bonds the coating to the lens.



**Uncoated**

Microscopic water droplets bead up, forming condensation and fog, which obscure vision.

**3M™ Scotchgard™ Protector Anti-Fog Coating**

Reduced contact angle flattens water beads into a thin, transparent film that allows light to pass through.



## 3M™ Scotchgard™ Protector Anti-Fog Coating

- Resists fogging longer than traditional anti-fog coatings through up to 25 washings with water.\*
- Helps provide scratch resistance in tough work environments.
- Designed for working in challenging situations, such as hot and humid conditions, indoor/outdoor work, physically demanding tasks and climate-controlled areas.




# 3M™ SecureFit™


Family of Protective Eyewear

There's a lot of variety to choose from in the 3M™ SecureFit™ family, all with the comfort, safety and style your workforce demands. Find the series with the right mix of features and value for you.

200 Series

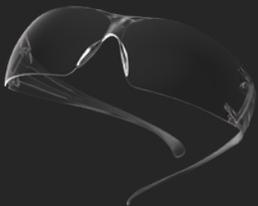

300 Series

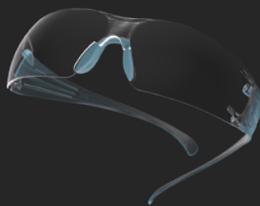

400 Series



400X Series



600 Series



3700 Series



# 200 Series




Lightweight comfort at  
an affordable price.



# 200 Series

The right fit changes everything. 3M™ SecureFit™ 200 Series Protective Eyewear features temples that automatically self-adjust to help provide a secure, comfortable fit every time.

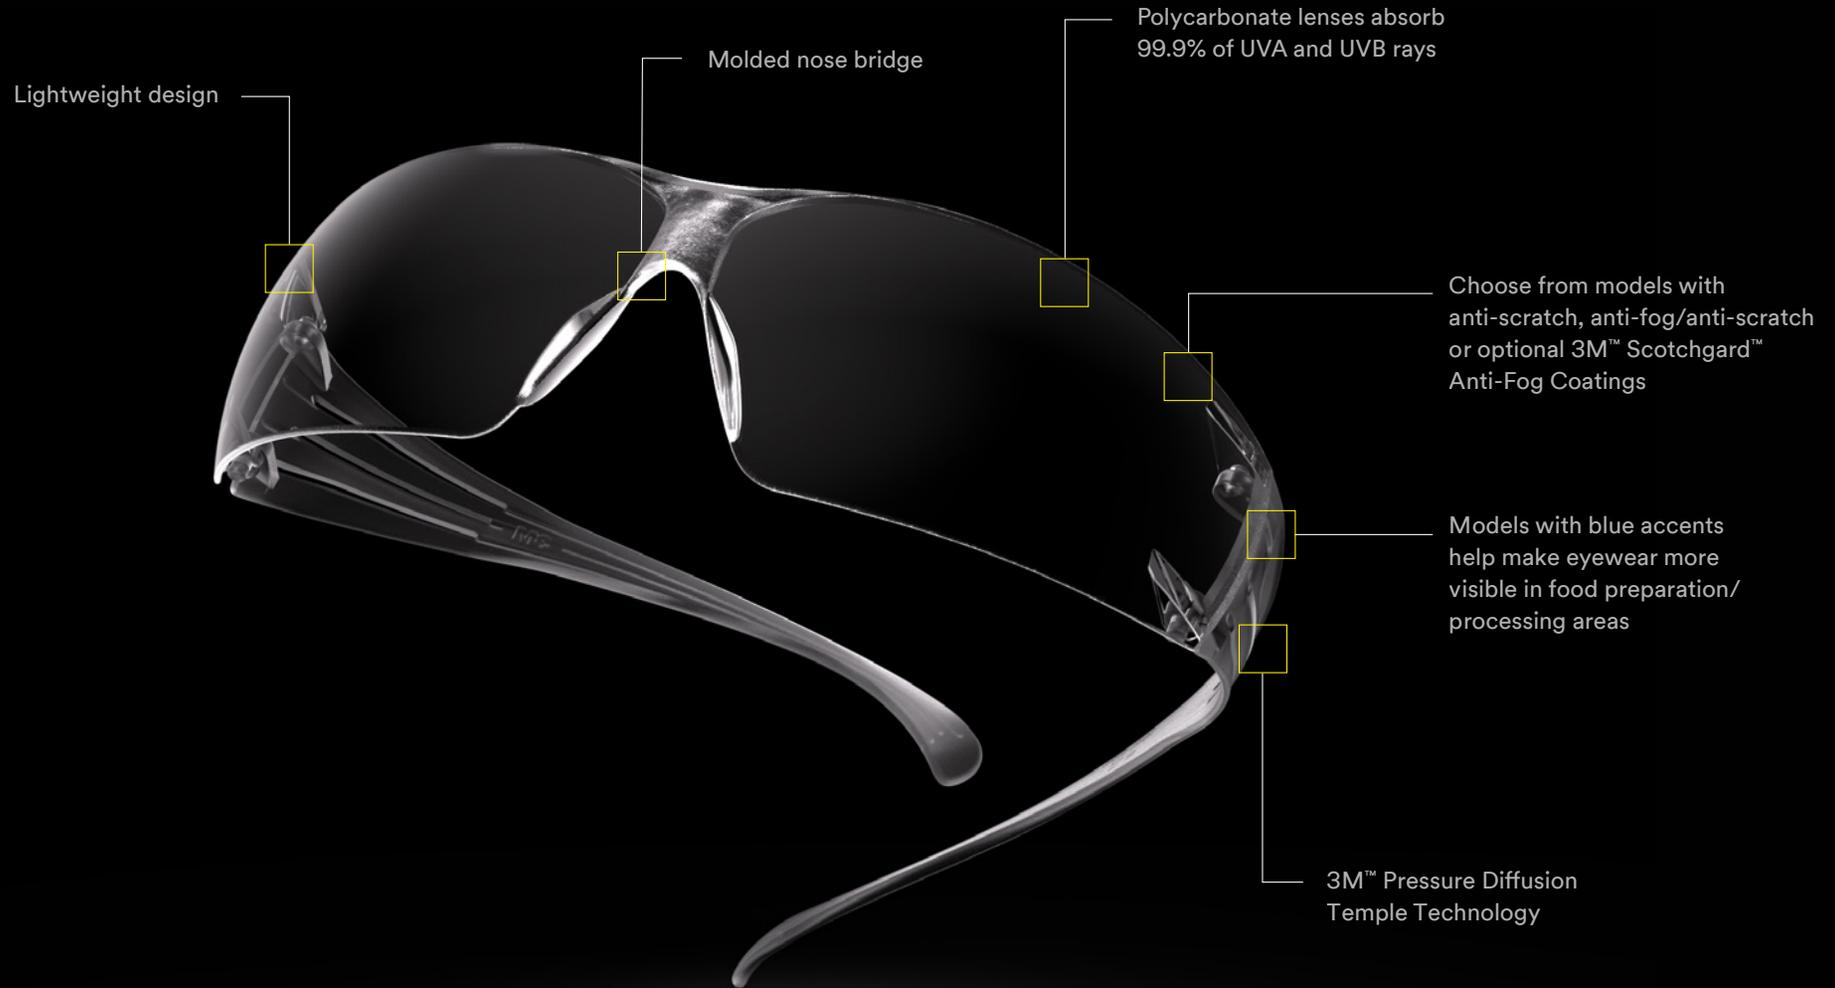

# 200 Series



Product ID: **SF201AF**  
Lens: **Clear**  
Frame: **Clear**  
Coating: **Anti-Fog/Anti-Scratch**



Product ID: **SF201AS**  
Lens: **Clear**  
Frame: **Clear**  
Coating: **Anti-Scratch**



Product ID: **SF203AF**  
Lens: **Amber**  
Frame: **Amber**  
Coating: **Anti-Fog/Anti-Scratch**



Product ID: **SF203AS**  
Lens: **Amber**  
Frame: **Amber**  
Coating: **Anti-Scratch**



Product ID: **SF202AF**  
Lens: **Gray**  
Frame: **Gray**  
Coating: **Anti-Fog/Anti-Scratch**



Product ID: **SF202AS**  
Lens: **Gray**  
Frame: **Gray**  
Coating: **Anti-Scratch**



Product ID: **SF201SGAF-BLU**  
Lens: **Clear**  
Frame: **Blue**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF204SGAF-BLU**  
Lens: **Blue**  
Frame: **Blue**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**

## Available SKUs

## 200 Series

Product I.D.	3M I.D.	Description	Frame Color	Lens Color	Coating Performance	Each/Case
SF201AF	70071676251	3M™ SecureFit™ 200 Series SF201AF, Clear, Clear Anti-Fog/Anti-Scratch Lens	Clear	Clear	AF/AS	20
SF201AS	70071647682	3M™ SecureFit™ 200 Series SF201AS, Clear, Clear Anti-Scratch Lens	Clear	Clear	AS	20
SF202AF	70071647666	3M™ SecureFit™ 200 Series SF202AF, Gray, Gray Anti-Fog/Anti-Scratch Lens	Gray	Gray	AF/AS	20
SF202AS	70071647690	3M™ SecureFit™ 200 Series SF202AS, Gray, Gray Anti-Scratch Lens	Gray	Gray	AS	20
SF203AF	70071647674	3M™ SecureFit™ 200 Series SF203AF, Amber, Amber Anti-Fog/Anti-Scratch Lens	Amber	Amber	AF/AS	20
SF203AS	70071647708	3M™ SecureFit™ 200 Series SF203AS, Amber, Amber Anti-Scratch Lens	Amber	Amber	AS	20
<b>3M™ SCOTCHGARD™ PROTECTOR ANTI-FOG COATING</b>						
SF201SGAF-BLU	70071731577	3M™ SecureFit™ 200 Series SF201SGAF-BLU, Blue, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Blue	Clear	SGAF/AS	20
SF204SGAF-BLU	70071731601	3M™ SecureFit™ 200 Series SF204SGAF-BLU, Blue, Blue Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Blue	Blue	SGAF/AS	20

# 300 Series




Designed to help accommodate high cheekbone structure and low nose bridge.



# 300 Series

3M™ SecureFit™ 300 Series Protective Eyewear is designed with Asian features in mind and features an adjusted lens angle and soft nose bridge.

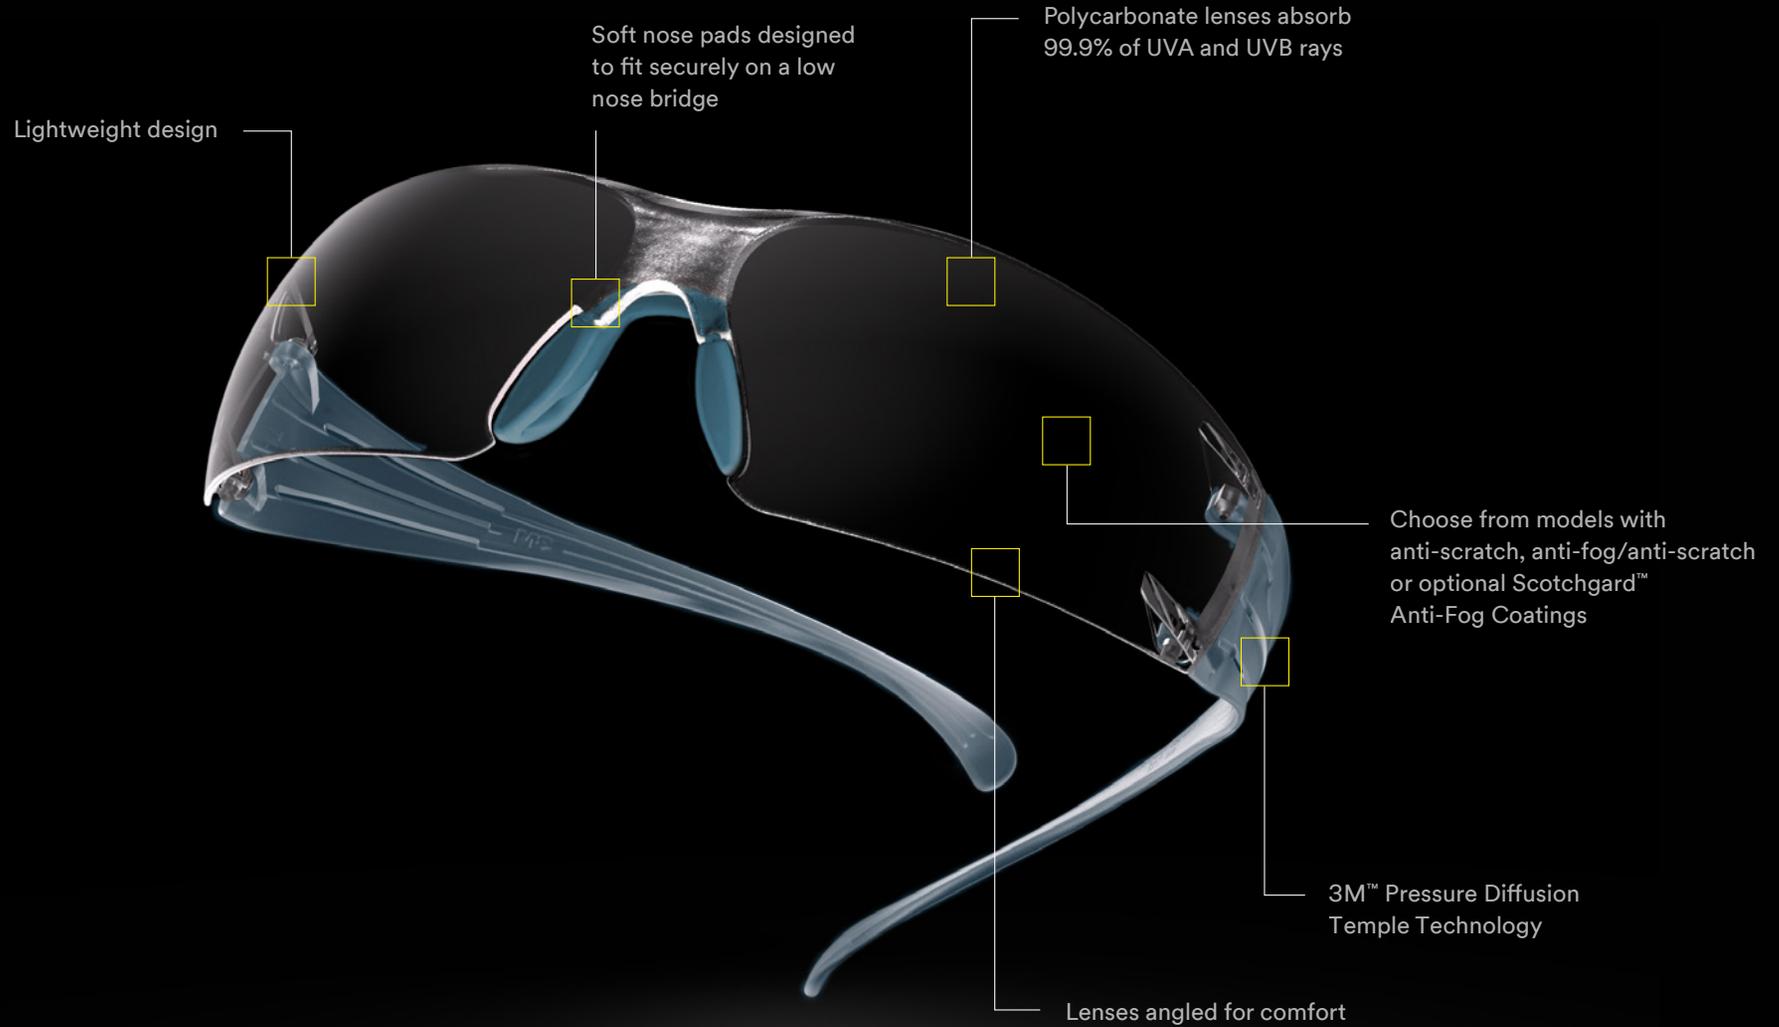

# 300 Series



Product ID: **SF301AF**  
Lens: **Clear**  
Frame: **Black**  
Coating: **Anti-Fog/Anti-Scratch**



Product ID: **SF301AS**  
Lens: **Clear**  
Frame: **Black**  
Coating: **Anti-Scratch**



Product ID: **SF302AF**  
Lens: **Gray**  
Frame: **Black**  
Coating: **Anti-Fog/Anti-Scratch**



Product ID: **SF302AS**  
Lens: **Gray**  
Frame: **Black**  
Coating: **Anti-Scratch**



Product ID: **SF301SGAF-BLU**  
Lens: **Clear**  
Frame: **Blue**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF301SGAF-LBL**  
Lens: **Clear**  
Frame: **Ice Blue**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF302SGAF-BLU**  
Lens: **Gray**  
Frame: **Blue**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF302SGAF-LBL**  
Lens: **Gray**  
Frame: **Ice Blue**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**

## Available SKUs

## 300 Series

Product I.D.	3M I.D.	Description	Frame Color	Lens Color	Coating Performance	Each/Case
SF301AF	70071731122	3M™ SecureFit™ 300 Series, SF301AF, Black, Clear Anti-Fog/Anti-Scratch Lens	Black	Clear	AF/AS	20
SF301AS	70071731148	3M™ SecureFit™ 300 Series, SF301AS, Black, Clear Anti-Scratch Lens	Black	Clear	AS	20
SF302AF	70071731130	3M™ SecureFit™ 300 Series, SF302AF, Black, Gray Anti-Fog/Anti-Scratch Lens	Black	Gray	AF/AS	20
SF302AS	70071731155	3M™ SecureFit™ 300 Series, SF302AS, Black, Gray Anti-Scratch Lens	Black	Gray	AS	20
<b>3M™ SCOTCHGARD™ PROTECTOR ANTI-FOG COATING</b>						
SF301SGAF-BLU	70071731742	3M™ SecureFit™ 300 Series, SF301SGAF-BLU, Blue, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Blue	Clear	SGAF/AS	20
SF301SGAF-LBL	70071731767	3M™ SecureFit™ 300 Series, SF301SGAF-LBL, Ice Blue, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Ice Blue	Clear	SGAF/AS	20
SF302SGAF-BLU	70071731759	3M™ SecureFit™ 300 Series, SF302SGAF-BLU, Blue, Gray Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Blue	Gray	SGAF/AS	20
SF302SGAF-LBL	70071731775	3M™ SecureFit™ 300 Series, SF302SGAF-LBL, Ice Blue, Gray Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Ice Blue	Gray	SGAF/AS	20

# 400 Series




Enhanced comfort and sleek design available in a variety of contemporary colors.



# 400 Series


Take the next step in comfort with 3M™ SecureFit™ 400 Series Protective Eyewear, featuring 3M™ Pressure Diffusion Temple Technology, a soft one-piece nose bridge, dual-injected temples and a range of options, including lens colors, premium coatings, readers and more.

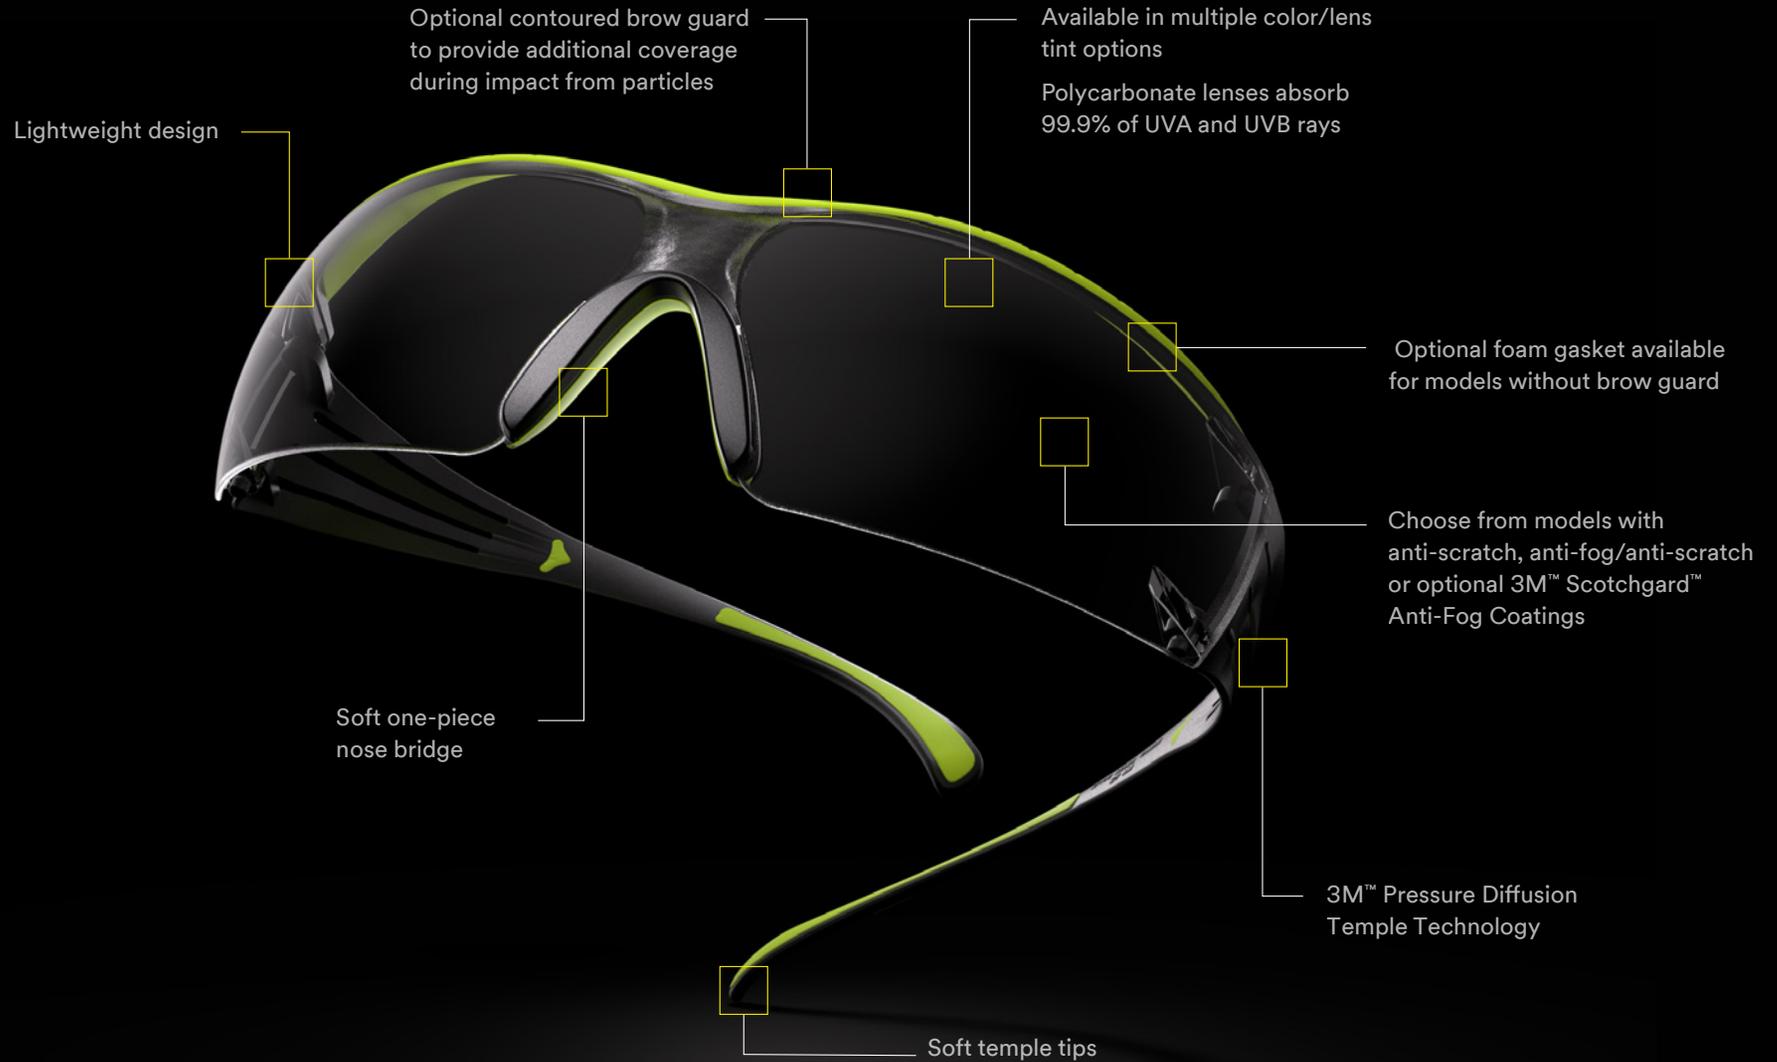

# 400 Series



Product ID: **SF401AF**  
Lens: **Clear**  
Frame: **Green/Black**  
Coating: **Anti-Fog/Anti-Scratch**

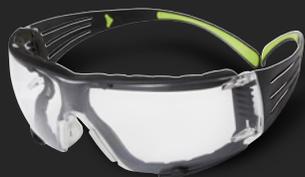

Product ID: **SF401AF-FM**  
Lens: **Clear w/Foam Gasket**  
Frame: **Green/Black**  
Coating: **Anti-Fog/Anti-Scratch**




Product ID: **SF402AF**  
Lens: **Gray**  
Frame: **Green/Black**  
Coating: **Anti-Fog/Anti-Scratch**



Product ID: **SF402AF-FM**  
Lens: **Gray w/Foam Gasket**  
Frame: **Green/Black**  
Coating: **Anti-Fog/Anti-Scratch**



Product ID: **SF410AS**  
Lens: **Indoor/Outdoor Mirror**  
Frame: **Green/Black**  
Coating: **Anti-Scratch**

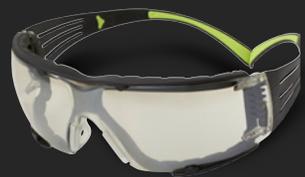

Product ID: **SF410AS-FM**  
Lens: **Indoor/Outdoor Mirror w/Foam Gasket**  
Frame: **Green/Black**  
Coating: **Anti-Scratch**



Product ID: **SF415AF**  
Lens: **Clear Readers +1.5**  
Frame: **Green/Black**  
Coating: **Anti-Fog/Anti-Scratch**



Product ID: **SF420AF**  
Lens: **Clear Readers +2.0**  
Frame: **Green/Black**  
Coating: **Anti-Fog/Anti-Scratch**



Product ID: **SF425AF**  
Lens: **Clear Readers +2.5**  
Frame: **Green/Black**  
Coating: **Anti-Fog/Anti-Scratch**

# 400 Series

with 3M™ Scotchgard™ Protector  
Anti-Fog Coating

Advanced coating technology  
for premium performance.



Product ID: **SF401SGAF-BLU**  
Lens: **Clear**  
Frame: **Blue/Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF401SGAF-BLU-F**  
Lens: **Clear w/ Foam Gasket**  
Frame: **Blue/Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF401SGAF-RED**  
Lens: **Clear**  
Frame: **Red/Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF407SGAF-BLU**  
Lens: **Indoor/Outdoor Gray**  
Frame: **Blue/Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF402SGAF-BLU**  
Lens: **Gray**  
Frame: **Blue/Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF402SGAF-BLU-F**  
Lens: **Gray w/ Foam Gasket**  
Frame: **Blue/Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF403SGAF-YEL**  
Lens: **Amber**  
Frame: **Yellow/Black**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF405SGAF-BLA**  
Lens: **Brown**  
Frame: **Brown/Black**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF406SGAF-BLA**  
Lens: **Orange**  
Frame: **Brown/Black**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**


# 400X Series

with Brow Guard

Helps provide additional coverage from particles.



Product ID: **SF401XAF-GRN**  
Lens: **Clear**  
Frame: **Green/Black**  
Coating: **Anti-Fog/Anti-Scratch**

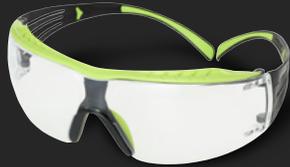

Product ID: **SF401XAS-GRN**  
Lens: **Clear**  
Frame: **Green/Black**  
Coating: **Anti-Scratch**



Product ID: **SF401XSGAF-BLU**  
Lens: **Clear**  
Frame: **Blue/Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF401XSGAF-GRN**  
Lens: **Clear**  
Frame: **Hi-Vis Green/Clear**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF401XSGAF-WHT**  
Lens: **Clear**  
Frame: **Light Blue/White**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF402XAF-GRN**  
Lens: **Gray**  
Frame: **Green/Black**  
Coating: **Anti-Fog/Anti-Scratch**



Product ID: **SF402XAS-GRN**  
Lens: **Gray**  
Frame: **Green/Black**  
Coating: **Anti-Scratch**



Product ID: **SF402XSGAF-BLU**  
Lens: **Gray**  
Frame: **Blue/Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF403XSGAF-YEL**  
Lens: **Amber**  
Frame: **Yellow/Black**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF409XAS-PNK**  
Lens: **Silver Mirror**  
Frame: **Pink/Black**  
Coating: **Anti-Scratch**



Product ID: **SF416XAS-BLK**  
Lens: **Orange Mirror**  
Frame: **Gray/Black**  
Coating: **Anti-Scratch**



Product ID: **SF407XSGAF-BLU**  
Lens: **Indoor/Outdoor Gray**  
Frame: **Blue/Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**

Available SKUs

400 Series

Product I.D.	3M I.D.	Description	Frame Color	Lens Color	Coating Performance	Each/Case
SF401AF	70071676350	3M™ SecureFit™ 400 Series, SF401AF, Green/Black, Clear Anti-Fog/Anti-Scratch Lens	Green/Black	Clear	AF/AS	20
SF401AF-FM	70071675337	3M™ SecureFit™ 400 Series, SF401AF-FM, Green/Black, Clear Anti-Fog/Anti-Scratch Lens, Foam Gasket	Green/Black	Clear	AF/AS	20
SF402AF	70071695350	3M™ SecureFit™ 400 Series, SF402AF, Green/Black, Gray Anti-Fog/Anti-Scratch Lens	Green/Black	Gray	AF/AS	20
SF402AF-FM	70071676608	3M™ SecureFit™ 400 Series, SF402AF-FM, Green/Black, Gray Anti-Fog/Anti-Scratch Lens, Foam Gasket	Green/Black	Gray	AF/AS	20
SF410AS	70071695368	3M™ SecureFit™ 400 Series, SF410AS, Green/Black, Indoor/Outdoor Mirror Anti-Scratch Lens	Green/Black	I/O Mirror	AS	20
SF410AS-FM	70071676384	3M™ SecureFit™ 400 Series, SF410AS-FM, Green/Black, Indoor/Outdoor Mirror Anti-Scratch Lens, Foam Gasket	Green/Black	I/O Mirror	AS	20
SF415AF	70071695376	3M™ SecureFit™ 400 Series, SF415AF, Green/Black, Clear Anti-Fog/Anti-Scratch Lens, +1.5 Diopter	Green/Black	Clear	AF/AS	20
SF420AF	70071695384	3M™ SecureFit™ 400 Series, SF420AF, Green/Black, Clear Anti-Fog/Anti-Scratch Lens, +2.0 Diopter	Green/Black	Clear	AF/AS	20
SF425AF	70071695392	3M™ SecureFit™ 400 Series, SF425AF, Green/Black, Clear Anti-Fog/Anti-Scratch Lens, +2.5 Diopter	Green/Black	Clear	AF/AS	20
<b>3M™ SCOTCHGARD™ PROTECTOR ANTI-FOG COATING</b>						
SF401SGAF-BLU	70071730645	3M™ SecureFit™ 400 Series, SF401SGAF-BLU, Blue/Gray, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Blue/Gray	Clear	SGAF/AS	20
SF401SGAF-BLU-F	70071730678	3M™ SecureFit™ 400 Series, SF401SGAF-BLU-F, Blue/Gray, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens, Foam Gasket	Blue/Gray	Clear	SGAF/AS	20
SF401SGAF-RED	70071730512	3M™ SecureFit™ 400 Series, SF401SGAF-RED, Red/Gray, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Red/Gray	Clear	SGAF/AS	20
SF402SGAF-BLU	70071730710	3M™ SecureFit™ 400 Series, SF402SGAF-BLU, Blue/Gray, Gray Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Blue/Gray	Gray	SGAF/AS	20
SF402SGAF-BLU-F	70071730686	3M™ SecureFit™ 400 Series, SF402SGAF-BLU-F Blue/Gray, Gray Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens, Foam Gasket	Blue/Gray	Gray	SGAF/AS	20
SF403SGAF-YEL	70071730728	3M™ SecureFit™ 400 Series, SF403SGAF-YEL, Yellow/Black, Amber Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Yellow/Black	Amber	SGAF/AS	20
SF405SGAF-BLA	70071730736	3M™ SecureFit™ 400 Series, SF405SGAF-BLA, Brown/Black, Brown Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Brown/Black	Brown	SGAF/AS	20
SF406SGAF-BLA	70071730744	3M™ SecureFit™ 400 Series, SF406SGAF-BLA, Brown/Black, Orange Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Brown/Black	Orange	SGAF/AS	20
SF407SGAF-BLU	70071730652	3M™ SecureFit™ 400 Series, SecureFit™ SF407SGAF-BLU, Blue/Gray, Indoor/Outdoor Gray Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Blue/Gray	I/O Gray	SGAF/AS	20
<b>ACCESSORIES</b>						
RX-SF400	70071731734	3M™ Protective Eyewear Prescription Insert for SecureFit™ 200, 300, 400 Series, RX-SF400	N/A	Clear	N/A	10

## Available SKUs

## 400X Series

with Brow Guard

Product I.D.	3M I.D.	Description	Frame Color	Lens Color	Coating Performance	Each/Case
SF401XAF-GRN	70071731593	3M™ SecureFit™ 400 Series, SF401XAF-GRN, Green/Black, Clear Anti-Fog/Anti-Scratch Lens	Green/Black	Clear	AF/AS	20
SF401XAS-GRN	70071731585	3M™ SecureFit™ 400 Series, SF401XAS-GRN, Green/Black, Clear Anti-Scratch Lens	Green/Black	Clear	AS	20
SF402XAF-GRN	70071731619	3M™ SecureFit™ 400 Series, SF402XAF-GRN, Green/Black, Gray Anti-Fog/Anti-Scratch Lens	Green/Black	Gray	AF/AS	20
SF402XAS-GRN	70071731718	3M™ SecureFit™ 400 Series, SF402XAS-GRN, Green/Black, Gray Anti-Scratch Lens	Green/Black	Gray	AS	20
SF409XAS-PNK	70071731692	3M™ SecureFit™ 400 Series, SF409XAS-PNK, Pink/Black, Silver Mirror Anti-Scratch Lens	Pink/Black	Silver Mirror	AS	20
SF416XAS-BLK	70071731676	3M™ SecureFit™ 400 Series, SF416XAS-BLK, Gray/Black, Orange Mirror Anti-Scratch Lens	Gray/Black	Orange Mirror	AS	20
<b>3M™ SCOTCHGARD™ PROTECTOR ANTI-FOG COATING</b>						
SF401XSGAF-BLU	70071731635	3M™ SecureFit™ 400 Series, SF401XSGAF-BLU, Blue/Gray, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Blue/Gray	Clear	SGAF/AS	20
SF401XSGAF-GRN	70071731627	3M™ SecureFit™ 400 Series, SF401XSGAF-GRN, Hi-Vis Green/Clear, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Hi-Vis Green/Clear	Clear	SGAF/AS	20
SF401XSGAF-WHT	70071731668	3M™ SecureFit™ 400 Series, SF401XSGAF-WHT, Light Blue/White, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Light Blue/White	Clear	SGAF/AS	20
SF402XSGAF-BLU	70071731643	3M™ SecureFit™ 400 Series, SF402XSGAF-BLU, Blue/Gray, Gray Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Blue/Gray	Gray	SGAF/AS	20
SF403XSGAF-YEL	70071731684	3M™ SecureFit™ 400 Series, SF403XSGAF-YEL, Yellow/Black, Amber Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Yellow/Black	Amber	SGAF/AS	20
SF407XSGAF-BLU	70071731650	3M™ SecureFit™ 400 Series, SF407XSGAF-BLU, Blue/Gray, Indoor/Outdoor Gray Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Blue/Gray	I/O Gray	SGAF/AS	20


# 600 Series



Stylish dual-lens frame with a variety of lens options.

# 600 Series

Get quality, durability and versatility all in one with 3M™ SecureFit™ 600 Series Protective Eyewear. Choose from a variety of features, including 3M™ Scotchgard™ Protector Anti-Fog Coating, multiple lens colors and a removable foam-lined gasket.

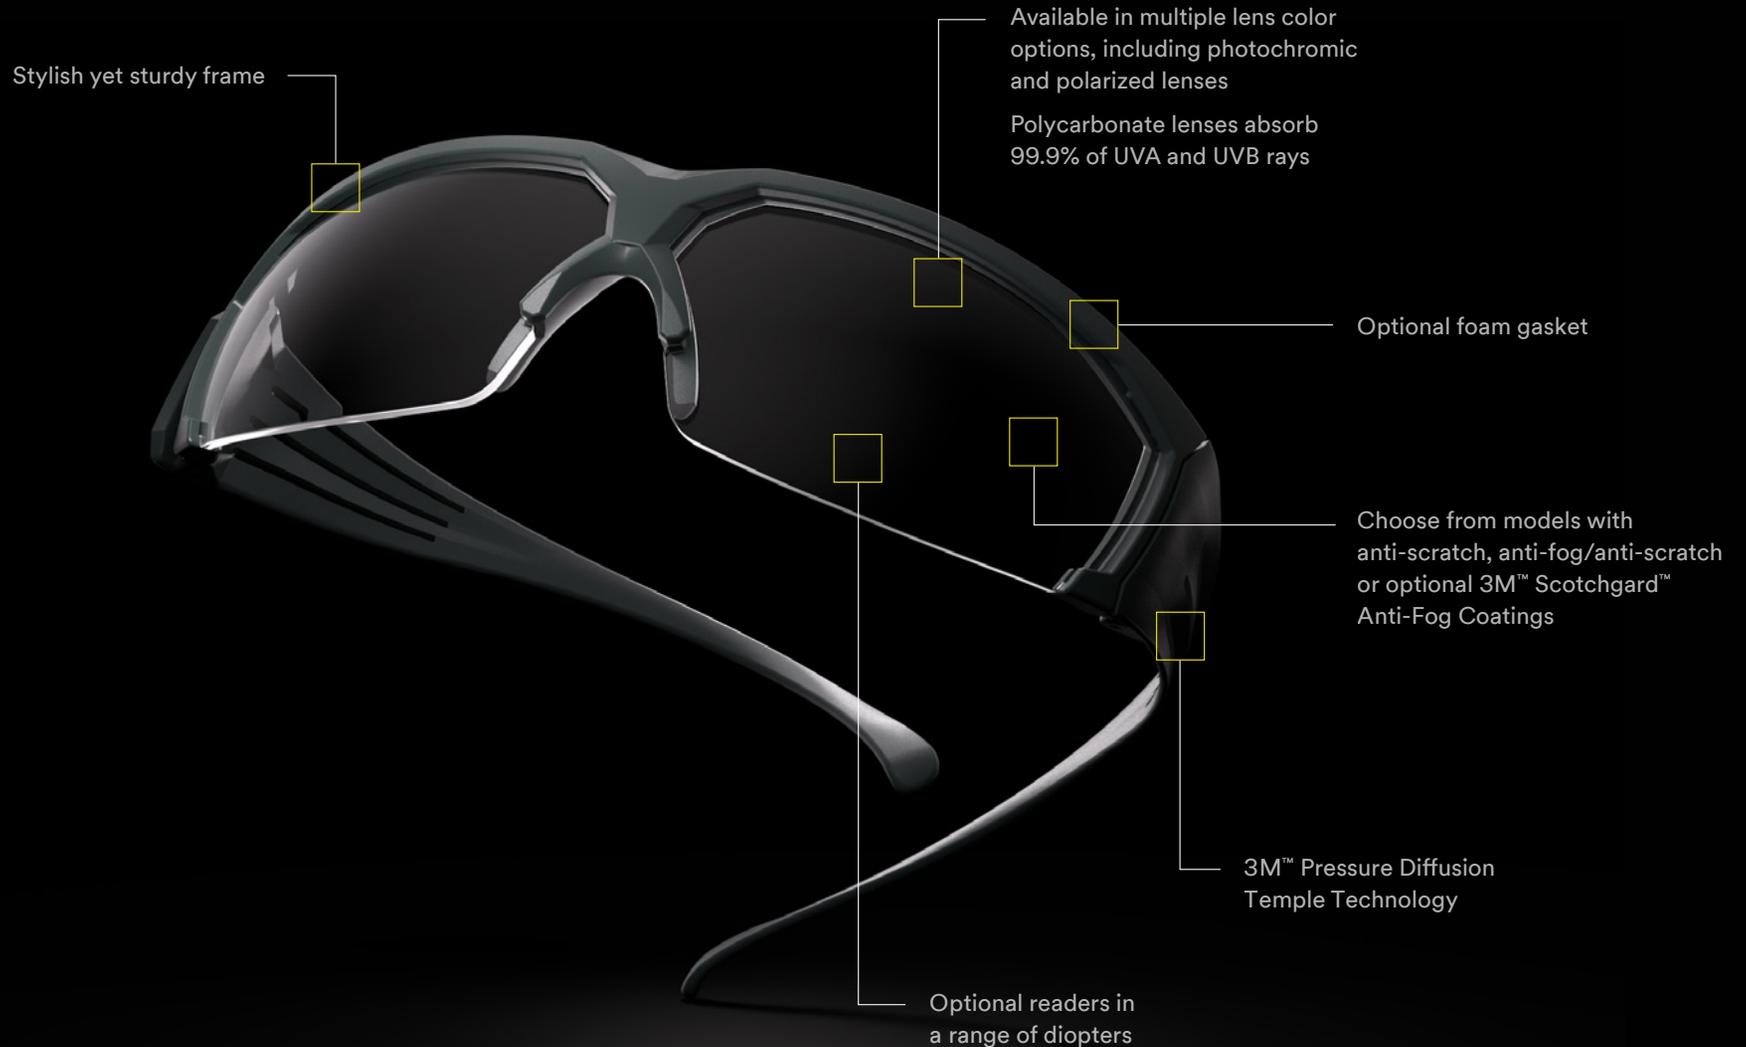

# 600 Series



Product ID: **SF601RAS**  
Lens: **Clear Rugged**  
Frame: **Gray**  
Coating: **Rugged Anti-Scratch**



Product ID: **SF602RAS**  
Lens: **Gray Rugged**  
Frame: **Gray**  
Coating: **Rugged Anti-Scratch**



Product ID: **SF611AS**  
Lens: **Gray Polarized**  
Frame: **Gray**  
Coating: **Anti-Scratch**



Product ID: **SF613AS**  
Lens: **Photochromic**  
Frame: **Gray**  
Coating: **Anti-Scratch**



Product ID: **SF617AS**  
Lens: **Low IR**  
Frame: **Gray**  
Coating: **Anti-Scratch**



Product ID: **SF630AS**  
Lens: **Shade 3**  
Frame: **Gray**  
Coating: **Anti-Scratch**



Product ID: **SF650AS**  
Lens: **Shade 5**  
Frame: **Gray**  
Coating: **Anti-Scratch**

# 600 Series



Product ID: **SF601SGAF**  
Lens: **Clear**  
Frame: **Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF601SGAF-FM**  
Lens: **Clear w/Foam Gasket**  
Frame: **Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF602SGAF**  
Lens: **Gray**  
Frame: **Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF602SGAF-FM**  
Lens: **Gray w/Foam Gasket**  
Frame: **Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF603SGAF**  
Lens: **Amber**  
Frame: **Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF607SGAF**  
Lens: **Indoor/Outdoor Gray**  
Frame: **Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF615SGAF**  
Lens: **Clear Readers +1.5**  
Frame: **Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF620SGAF**  
Lens: **Clear Readers +2.0**  
Frame: **Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF625SGAF**  
Lens: **Clear Readers +2.5**  
Frame: **Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF615GSGAF**  
Lens: **Gray Readers +1.5**  
Frame: **Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF620GSGAF**  
Lens: **Gray Readers +2.0**  
Frame: **Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF625GSGAF**  
Lens: **Gray Readers +2.5**  
Frame: **Gray**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**

# 600 Series

Tactical

Tested to Military Vo High Velocity Impact requirement of MIL-PRF 32432(GL)\*



Product ID: **SF601SGAF-TAC**  
Lens: **Clear**  
Frame: **Black**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF602SGAF-TAC**  
Lens: **Gray**  
Frame: **Black**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF603SGAF-TAC**  
Lens: **Amber**  
Frame: **Black**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF613AS-TAC**  
Lens: **Photochromic**  
Frame: **Black**  
Coating: **Anti-Scratch**

\*15 caliber — 640-660 ft./sec. Note: This product is not currently listed on any QPL or QML program.

## Available SKUs

# 600 Series

Product I.D.	3M I.D.	Description	Frame Color	Lens Color	Coating Performance	Each/Case
SF601RAS	70071676897	3M™ SecureFit™ 600 Series, SF601RAS, Gray, Clear Rugged Anti-Scratch Lens	Gray	Clear	AS	20
SF602RAS	70071696051	3M™ SecureFit™ 600 Series, SF602RAS, Gray, Gray Rugged Anti-Scratch Lens	Gray	Gray	AS	20
SF611AS	70071696226	3M™ SecureFit™ 600 Series, SF611AS, Gray, Gray Polarized Anti-Scratch Lens	Gray	Gray	AS	20
SF613AS	70071696234	3M™ SecureFit™ 600 Series, SF613AS, Gray, Photochromic Anti-Scratch Lens	Gray	Photochromic	AS	20
SF617AS	70071696135	3M™ SecureFit™ 600 Series, SF617AS, Gray, Low IR Anti-Scratch Lens	Gray	Low IR	AS	20
SF630AS	70071696143	3M™ SecureFit™ 600 Series, SF630AS, Gray, Shade 3.0 IR Anti-Scratch Lens	Gray	Shade 3	AS	20
SF650AS	70071696150	3M™ SecureFit™ 600 Series, SF650AS, Gray, Shade 5.0 IR Anti-Scratch Lens	Gray	Shade 5	AS	20
<b>3M™ SCOTCHGARD™ PROTECTOR ANTI-FOG COATING</b>						
SF601SGAF	70071696069	3M™ SecureFit™ 600 Series, SF601SGAF, Gray, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Gray	Clear	SGAF/AS	20
SF601SGAF-FM	70071696093	3M™ SecureFit™ 600 Series, SF601SGAF-FM, Gray, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens, Foam Gasket	Gray	Clear	SGAF/AS	20
SF602SGAF	70071696077	3M™ SecureFit™ 600 Series, SF602SGAF, Gray, Gray Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Gray	Gray	SGAF/AS	20
SF602SGAF-FM	70071696101	3M™ SecureFit™ 600 Series, SF602SGAF-FM, Gray, Gray Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens, Foam Gasket	Gray	Gray	SGAF/AS	20
SF603SGAF	70071696085	3M™ SecureFit™ 600 Series, SF603SGAF, Gray, Amber Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Gray	Amber	SGAF/AS	20
SF607SGAF	70071696119	3M™ SecureFit™ 600 Series, SF607SGAF, Gray, Indoor/Outdoor Gray Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Gray	I/O Gray	SGAF/AS	20
SF615SGAF	70071696168	3M™ SecureFit™ 600 Series, SF615SGAF, Gray, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens, +1.5 Diopter	Gray	Clear	SGAF/AS	20
SF615GSGAF	70071696192	3M™ SecureFit™ 600 Series, SF615GSGAF, Gray, Gray Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens, +1.5 Diopter	Gray	Gray	SGAF/AS	20
SF620SGAF	70071696176	3M™ SecureFit™ 600 Series, SF620SGAF, Gray, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens, +2.0 Diopter	Gray	Clear	SGAF/AS	20
SF620GSGAF	70071696200	3M™ SecureFit™ 600 Series, SF620GSGAF, Gray, Gray Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens, +2.0 Diopter	Gray	Gray	SGAF/AS	20
SF625GSGAF	70071696218	3M™ SecureFit™ 600 Series, SF625GSGAF, Gray, Gray Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens, +2.5 Diopter	Gray	Gray	SGAF/AS	20
SF625SGAF	70071696184	3M™ SecureFit™ 600 Series, SF625SGAF, Gray, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens, +2.5 Diopter	Gray	Clear	SGAF/AS	20
<b>ACCESSORIES</b>						
SF600FI	70071696242	3M™ SecureFit™ SF600FI, Replacement Foam Gasket	N/A	N/A	N/A	20

## Available SKUs

# 600 Series

Tactical

Product I.D.	3M I.D.	Description	Frame Color	Lens Color	Coating Performance	Each/Case
SF601SGAF-TAC	70071677150	3M™ SecureFit™ SF601SGAF-TAC, Black, Clear Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Black	Clear	SGAF/AS	10
SF602SGAF-TAC	70071696648	3M™ SecureFit™ SF602SGAF-TAC, Black, Gray Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Black	Gray	SGAF/AS	10
SF603SGAF-TAC	70071696655	3M™ SecureFit™ SF603SGAF-TAC, Black, Amber Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Black	Amber	SGAF/AS	10
SF613AS-TAC	70071677168	3M™ SecureFit™ SF613AS-TAC, Black, Photochromic Lens, Anti-Scratch Lens	Black	Photochromic	AS	10

# 3700 Series




Over-the-glass protection designed with self-adjusting temple technology for all-day wearability.



# 3700 Series

3M™ SecureFit™ 3700 Series is designed to offer eye protection with all-day wearability for workers with prescription eyeglasses. Since prescription glasses may not be anti-fog coated, you can choose between a standard anti-scratch coating or 3M™ Scotchgard™ Protector Anti-Fog Coating.

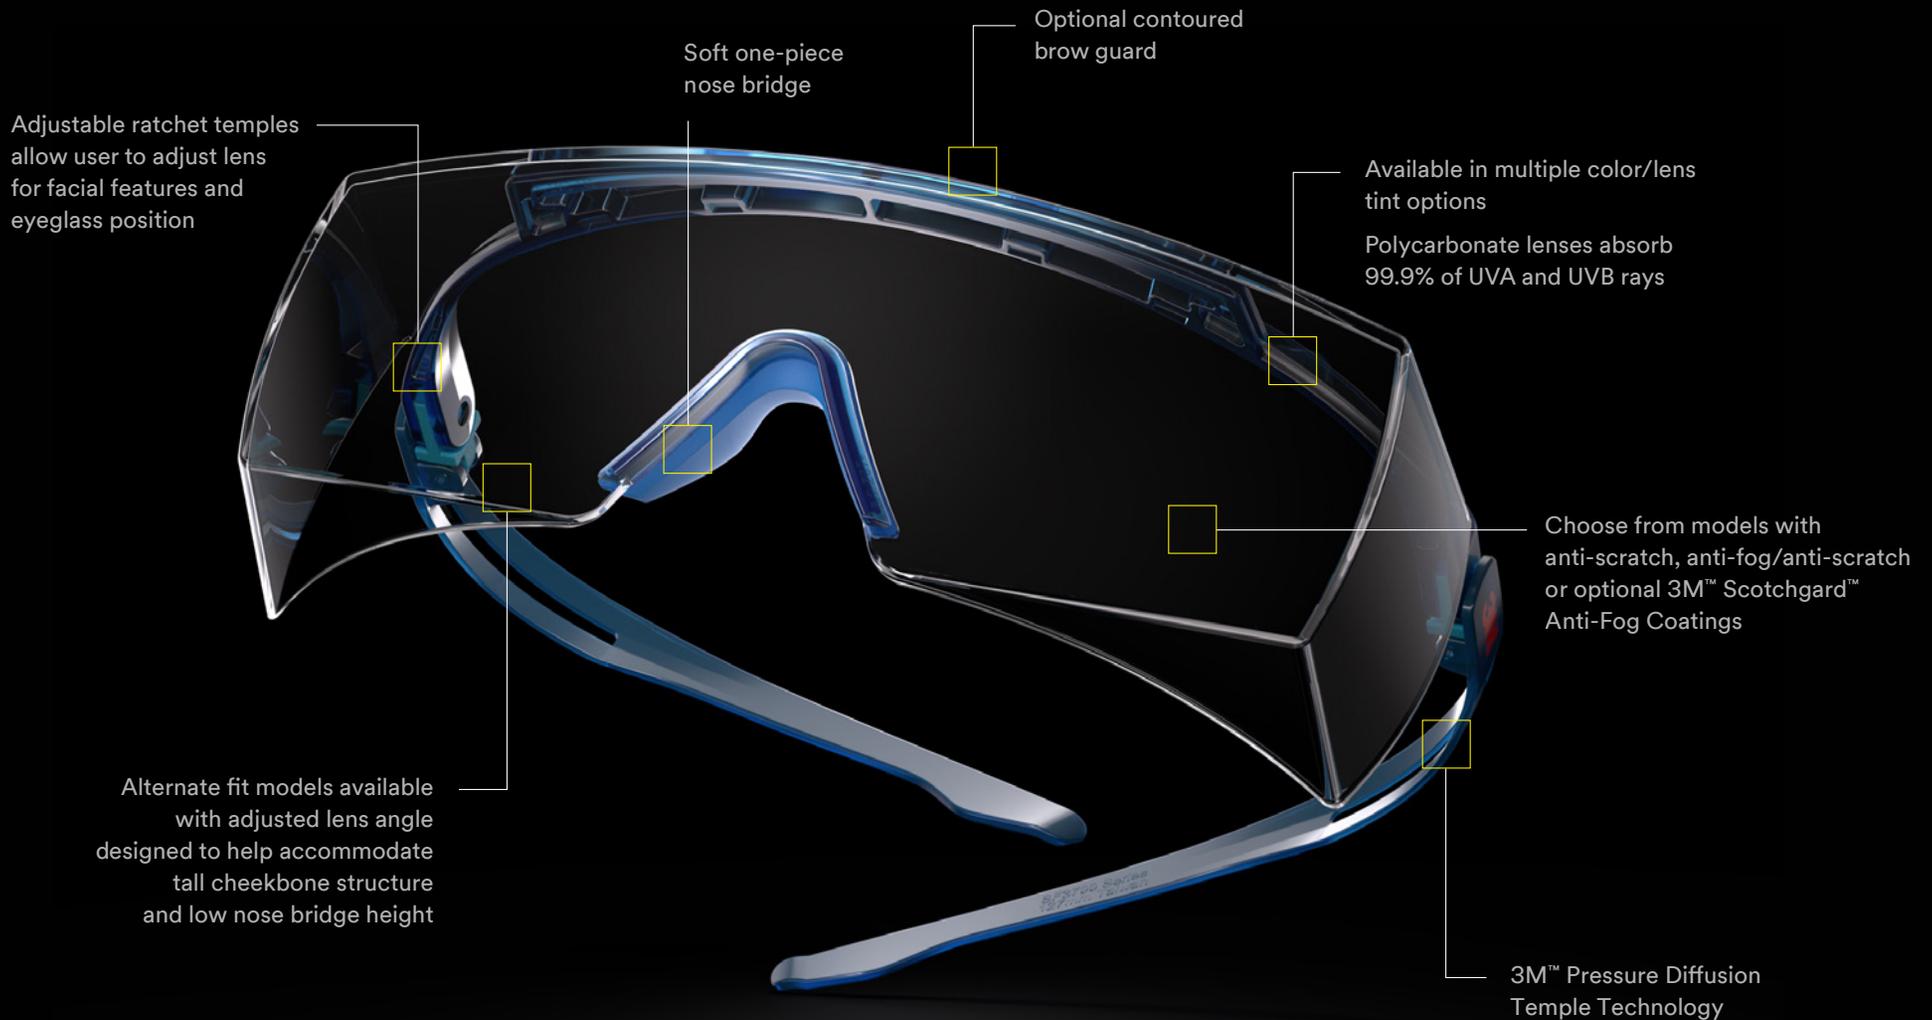


# 3700 Series



Product ID: **SF3701AS-BLU**  
Lens: **Clear**  
Frame: **Blue/Blue**  
Coating: **Anti-Scratch**



Product ID: **SF3701SGAF-BLU**  
Lens: **Clear**  
Frame: **Blue/Blue**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**

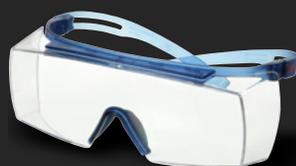

Product ID: **SF3701ASGAF-BLU**  
Lens: **Clear Alternate Fit**  
Frame: **Blue/Blue**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF3701AS-GRN**  
Lens: **Clear**  
Frame: **Gray/Lime Green**  
Coating: **Anti-Scratch**



Product ID: **SF3701SGAF-GRN**  
Lens: **Clear**  
Frame: **Gray/Lime Green**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF3701AS-ORG**  
Lens: **Clear**  
Frame: **Gray/Orange**  
Coating: **Anti-Scratch**



Product ID: **SF3701SGAF-ORG**  
Lens: **Clear**  
Frame: **Gray/Orange**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF3702AS-BLU**  
Lens: **Gray**  
Frame: **Blue/Blue**  
Coating: **Anti-Scratch**



Product ID: **SF3702SGAF-BLU**  
Lens: **Gray**  
Frame: **Blue/Blue**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF3703SGAF-GRN**  
Lens: **Amber**  
Frame: **Gray/Lime Green**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**




Product ID: **SF3707AS-BLU**  
Lens: **Indoor/Outdoor Gray**  
Frame: **Blue/Blue**  
Coating: **Anti-Scratch**




Product ID: **SF3707SGAF-BLU**  
Lens: **Indoor/Outdoor Gray**  
Frame: **Blue/Blue**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**

# 3700X Series

with Brow Guard

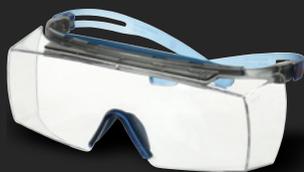

Product ID: **SF3701XAS-BLU**  
Lens: **Clear**  
Frame: **Gray/Blue**  
Coating: **Anti-Scratch**

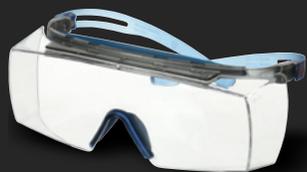


Product ID: **SF3701XSGAF-BLU**  
Lens: **Clear**  
Frame: **Gray/Blue**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF3701XASGAF-BLU**  
Lens: **Clear Alternate Fit**  
Frame: **Gray/Blue**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF3701XSGAF-RED**  
Lens: **Clear**  
Frame: **Gray/Red**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**

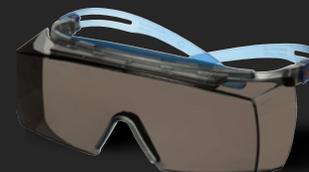

Product ID: **SF3702XSGAF-BLU**  
Lens: **Gray**  
Frame: **Gray/Blue**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**



Product ID: **SF3707XSGAF-BLU**  
Lens: **Indoor/Outdoor Gray**  
Frame: **Gray/Blue**  
Coating: **Scotchgard™ Anti-Fog/Anti-Scratch**

Available SKUs

# 3700 Series

Product I.D.	3M I.D.	Description	Frame Color	Lens Color	Coating Performance	Each/Case
SF3701AS-BLU	70071731973	3M™ SecureFit™ 3700 Series, SF3701AS-BLU, Blue/Blue, Clear OTG Anti-Scratch Lens	Blue/Blue	Clear	AS	10
SF3701SGAF-BLU	70071731965	3M™ SecureFit™ 3700 Series, SF3701SGAF-BLU, Blue/Blue, Clear OTG Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Blue/Blue	Clear	SGAF/AS	10
SF3701AS-GRN	70071732096	3M™ SecureFit™ 3700 Series, SF3701AS-GRN, Gray/Lime Green, Clear OTG Anti-Scratch Lens	Gray/Lime Green	Clear	AS	10
SF3701SGAF-GRN	70071732088	3M™ SecureFit™ 3700 Series, SF3701SGAF-GRN, Gray/Lime Green, Clear OTG Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Gray/Lime Green	Clear	SGAF/AS	10
SF3701AS-ORG	70071732997	3M™ SecureFit™ 3700 Series, SF3701AS-ORG, Gray/Orange, Clear OTG Anti-Scratch Lens	Gray/Orange	Clear	AS	10
SF3701SGAF-ORG	70071732948	3M™ SecureFit™ 3700 Series, SF3701SGAF-ORG, Gray/Orange, Clear OTG Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Gray/Orange	Clear	SGAF/AS	10
SF3702AS-BLU	70071731999	3M™ SecureFit™ 3700 Series, SF3702AS-BLU, Blue/Blue, Gray OTG Anti-Scratch Lens	Blue/Blue	Gray	AS	10
SF3702SGAF-BLU	70071731981	3M™ SecureFit™ 3700 Series, SF3702SGAF-BLU, Blue/Blue, Gray OTG Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Blue/Blue	Gray	SGAF/AS	10
SF3703SGAF-GRN	70071732104	3M™ SecureFit™ 3700 Series, SF3703SGAF-GRN, Gray/Lime Green, Amber OTG Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Gray/Lime Green	Amber	SGAF/AS	10
SF3707AS-BLU	70071732070	3M™ SecureFit™ 3700 Series, SF3707AS-BLU, Blue/Blue, Indoor/Outdoor Gray OTG Anti-Scratch Lens	Blue/Blue	I/O Gray	AS	10
SF3707SGAF-BLU	70071732062	3M™ SecureFit™ 3700 Series, SF3707SGAF-BLU, Blue/Blue, Indoor/Outdoor Gray OTG Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Blue/Blue	I/O Gray	SGAF/AS	10
<b>BROW GUARD</b>						
SF3701XAS-BLU	70071732047	3M™ SecureFit™ 3700 Series, SF3701XAS-BLU, Gray/Blue, Brow Guard, Clear OTG Anti-Scratch Lens	Gray/Blue	Clear	AS	10
SF3701XSGAF-BLU	70071732039	3M™ SecureFit™ 3700 Series, SF3701XSGAF-BLU, Gray/Blue, Brow Guard, Clear OTG Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Gray/Blue	Clear	SGAF/AS	10
SF3701XSGAF-RED	70071733003	3M™ SecureFit™ 3700 Series, SF3701XSGAF-RED, Gray/Red, Brow Guard, Clear OTG Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Gray/Red	Clear	SGAF/AS	10
SF3702XSGAF-BLU	70071732054	3M™ SecureFit™ 3700 Series, SF3702XSGAF-BLU, Gray/Blue, Brow Guard, Gray OTG Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Gray/Blue	Gray	SGAF/AS	10
SF3707XSGAF-BLU	70071732179	3M™ SecureFit™ 3700 Series, SF3707XSGAF-BLU, Gray/Blue, Brow Guard, Indoor/Outdoor Gray OTG Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Gray/Blue	I/O Gray	SGAF/AS	10
<b>ALTERNATE FIT</b>						
SF3701ASGAF-BLU	70071732153	3M™ SecureFit™ 3700 Series, SF3701ASGAF-BLU, Alternate Fit, Blue/Blue, Clear OTG Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Blue/Blue	Clear	SGAF/AS	10
SF3701XASGAF-BLU	70071732914	3M™ SecureFit™ 3700 Series, SF3701XASGAF-BLU, Alternate Fit, Gray/Blue, Brow Guard, Clear OTG Scotchgard™ Protector Anti-Fog Coating/Anti-Scratch Lens	Gray/Blue	Clear	SGAF/AS	10

## Series Comparison Chart


Features	200 Series	300 Series	400 Series	400X Series	600 Series	3700 Series	3700X Series
3M™ Pressure Diffusion Temple Technology	X	X	X	X	X	X	X
3M™ Scotchgard™ Protector Anti-Fog Coating	X	X	X	X	X	X	X
Rugged Anti-Scratch Coating					X		
Adjustable Nose Bridge			X		X		
Brow Guard				X			X
Removable Foam Gasket			X		X		
Dual Lens Design					X		
Readers			X		X		
Alternate Fit		X				X	X
Food Segment	X						
Military/Law Enforcement Segment					X		

3M™ Solus™ Brand is a family of protective eyewear that offers another option for comfortable and stylish eye protection with a variety of features and customization options.

# Solus Series

With a variety of lens and frame colors, plus a stylish fit and a lower-profile frame, Solus™ Brand provides your workforce eye protection that's reliable and fashionable.


- ▶ Polycarbonate lenses
- ▶ Optional Scotchgard™ Protector Anti-Fog Coating
- ▶ Optional elastic strap (1000 series only)
- ▶ Padded temples and soft nose bridge for added comfort
- ▶ Adjustable ratchet temples (2000 series only)

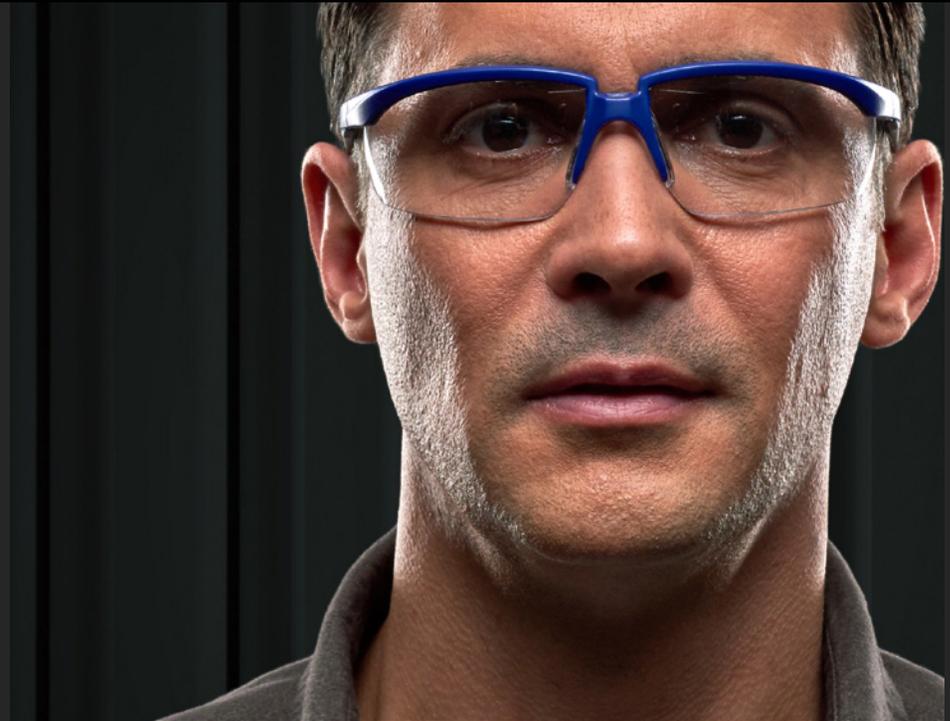

**1000 Series**



**2000 Series**

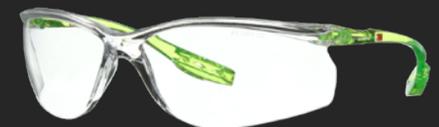

**CCS Series**


## Additional resources

### Fit testing

Eye injuries can occur even while wearing eye protection if the safety glasses do not fit properly. When fitted properly, eyewear should cover the soft tissue around the eye. Small spectacles on larger heads can leave exposed areas. Spectacles that are too large for a person can leave gaps. Selecting the proper eye protection for the task and ensuring proper-fitting eyewear can help to reduce worker eye injuries.

3M has developed a step-by-step method to ensure you can find your best-fitting protective eyewear, and can help you to validate properly fitting eyewear.

- ▶ [Download 3M™ Eyewear Fit System FS200 brochure](#)

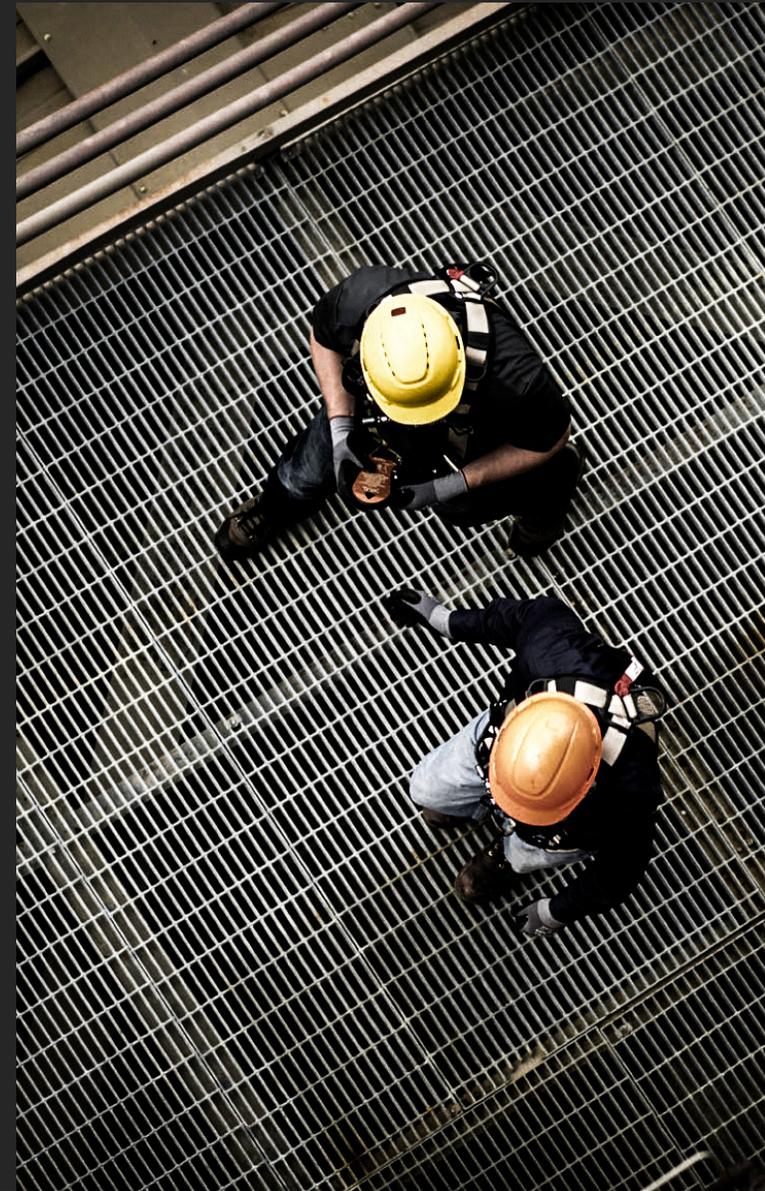



## **A difference you can see and feel.**

Eyewear that's lightweight and comfortable — believe it. Contact your 3M sales rep to request trial wear samples of 3M™ SecureFit™ Protective Eyewear and feel the difference the instant you put them on. See for yourself.

▶ **Visit [3M.com/SecureFit](https://www.3m.com/SecureFit)**